

Installation Manual

For Nissan Z (RZ34) / 400Z (RZ34) / Fairlady Z (RZ34) 2022-Present
-Only for the model **with pedestrian hood hinge**


SKU: MYNN1579

- ※ Do Not Press Struts By Hands. Please Install Struts On Car Directly.
- ※ Please follow the below steps to complete the installation. If you meet any troubles during this process, just feel free to contact us. We will try our best to help you solve them!

Step 1: Use a small flat head screwdriver, remove rivet clips at A (circled in red).



Step 2: Fix ball stud at hole A. You need to reach into the wheel well to install the flat washer and lock washer with the 14mm nut onto the ball stud.
(Left & Right Are Symmetrical, Repeat the same operation is ok)

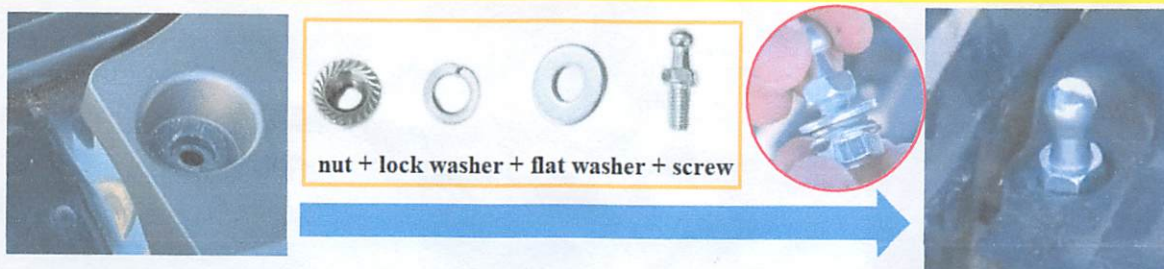


※ Step 2 is a bit complicated, it's best to have a person on the side to help you finish it. And If your car is on lowered suspension, you will need to raise the front end of the car before this installation.


Copyright © 2002, Ford Motor Company. All rights reserved. Ford, the Ford logo, and other marks contained herein are trademarks of Ford Motor Company. Other marks contained herein are the property of their respective owners.

For more information, visit www.ford.com.
 * The following steps are by hand. If you need any tools, please contact your local Ford dealer for more information.
 * Please follow the following steps to complete the installation. If you need any tools, please contact your local Ford dealer for more information. We will try our best to help you solve the problem.

Step 1: Use a small flat head screwdriver to remove the rivet at the top of the door.



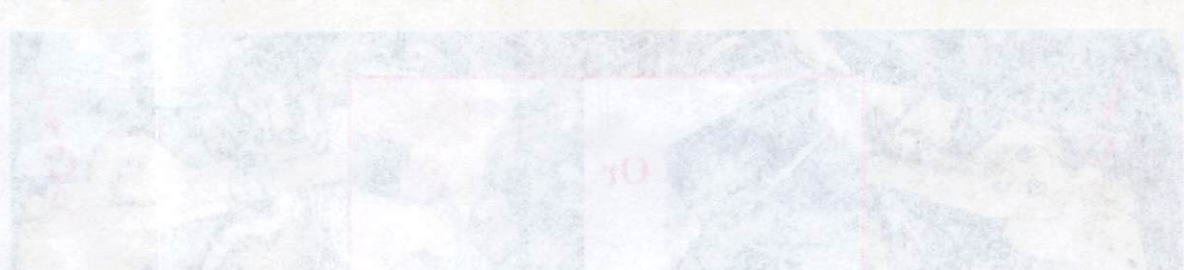


Step 2: The rivet should be removed. If you need a punch and hammer, please contact your local Ford dealer for more information.
 The rivet should be removed. If you need a punch and hammer, please contact your local Ford dealer for more information.
 (Left & Right are symmetrical. Repeat the same operation is OK.)

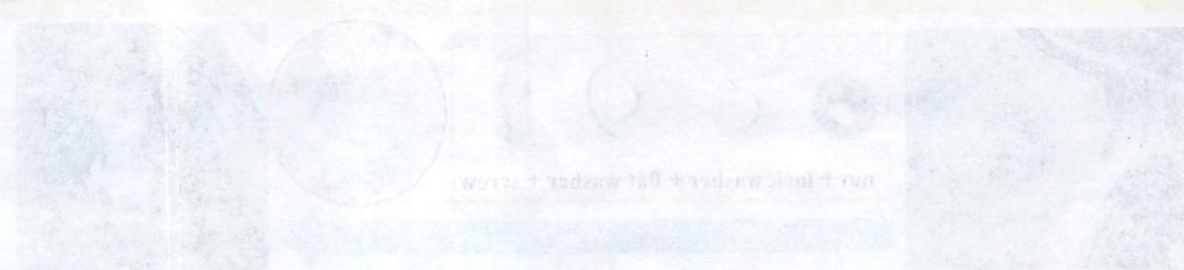

* Step 2 is a bit complicated, it's best to have a person on the side to help you finish it. And if your car is on lowered suspension, you will need to raise the front end of the car before this installation.

Step 3: Unbolt factory hood hinge bolt B. Use the Nut F we provided, secure the Bracket E. (Brackets are installed symmetrically at hood left & right)

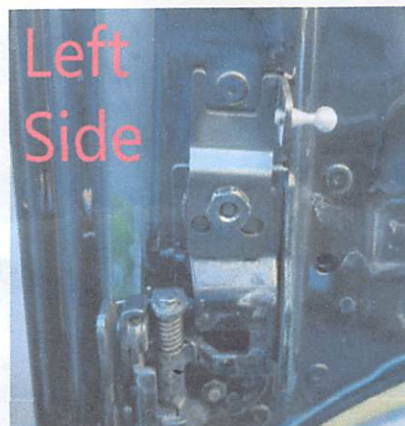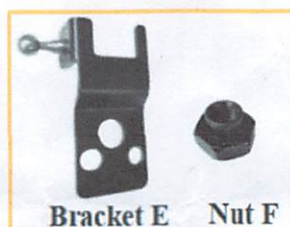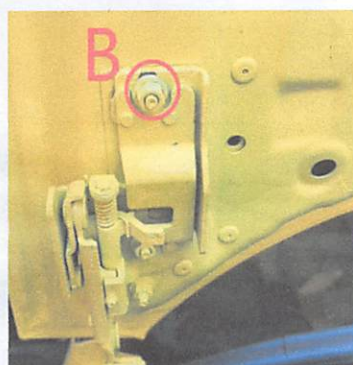

Step 4: Snap strut into ball studs of screw and bracket.

Don't take off the U shape clip on joint



Check for any hood bulging by the wheel well ball stud. If there is bulging, relocate the lock washer to below the wheel well between the 14mm nut. Sometimes trimming of plastic foam might be necessary.

